HOME
DECORATORS
COLLECTION

BF-25073 UTILITY TOWER WITH PEG BOARD

INV#13644

ASSEMBLY INSTRUCTIONS

Made In China

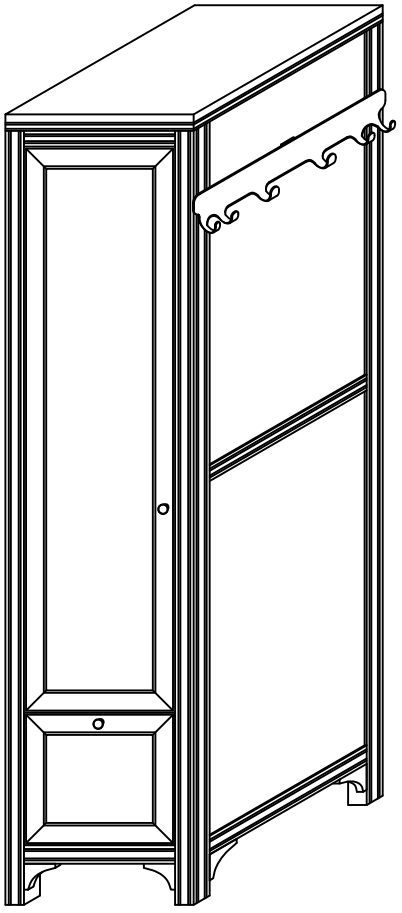

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 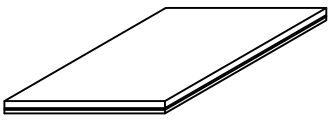 TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  DOOR-1PC	E  SMALL BACK PANEL-1PC	F  LARGE BACK PANEL-1PC
G  ADORNING PANEL-1PC	H  ACROSS PANEL-1PC	I 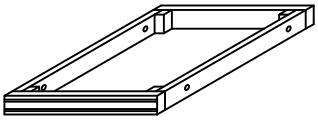 BOTTOM PANEL-1PC
J 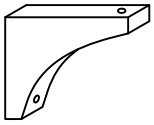 PANELS-2PCS	K  SHELF-1PC	L 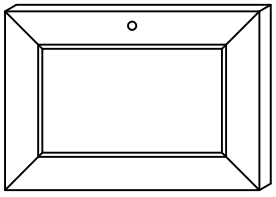 DRAWER PANEL FRONT-1PC

M 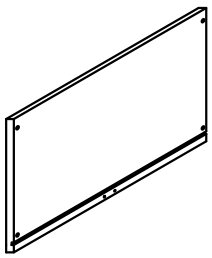 LEFT DRAWER PANEL SIDE-1PC	N 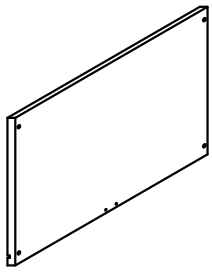 RIGHT DRAWER PANEL SIDE-1PC	O DRAWER PANEL BACK-1PC
P 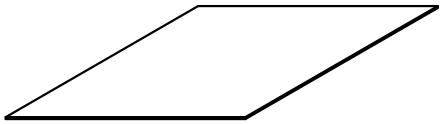 DRAWER PANEL BOTTOM-1PC	Q 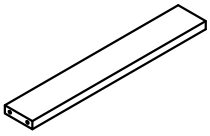 DRAWER SUPPORT PANEL-1PC	R 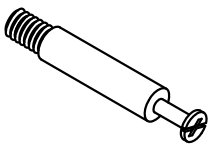 CAM-BOLTS-8PCS
S 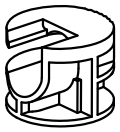 CAM-LOCKS-8PCS	T 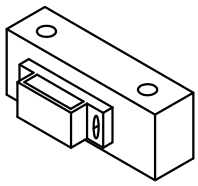 MAGNET-1PC	U 8mm× 1-1/4" 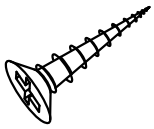 SCREWS-3PCS
V 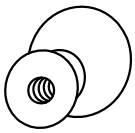 KNOBS-2PCS	W 8mm× 5/8" 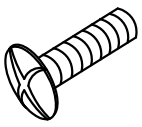 SCREWS-2PCS	X 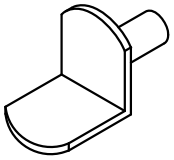 SHELF SUPPORTS-4PCS
Y  FEMALE MAGNETS-2PCS	Z 5mm× 1/2"  SCREWS-2PCS	A1 6mm× 1"  SCREWS-12PCS

B1 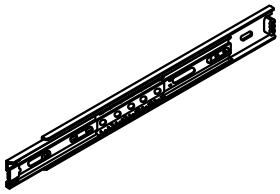 OUTER SLIDERS-2PCS	C1 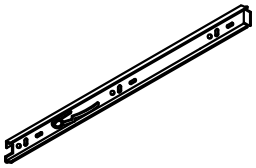 INNER SLIDES-2PCS	D1 6mm× 1/2" SCREWS-30PCS	E1 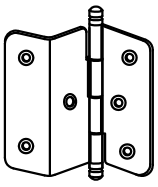 HINGES-3PCS
F1 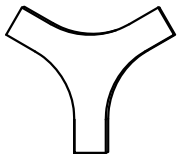 CAM-TOOL-1PC	G1 7mm× 5/8"  SCREWS-50PCS	H1 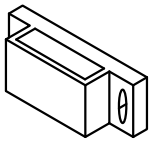 SMALL MAGNET-1PC	I1 8mm× 1" 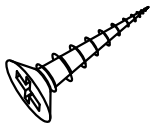 SCREWS-6PCS
J1 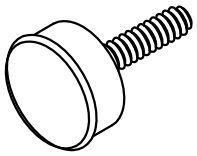 FEET-4PCS	K1 7mm× 7/8"  SCREWS-4PCS	L1 GECKOS-4PCS	M1 PLASTIC BELTS-2PCS
N1 6mm× 3/4"  SCREWS-4PCS	O1 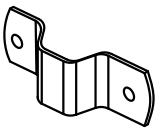 HOOKS-4PCS	P1 11mm× 1-1/4"  BOLTS-4PCS	Q1 ALLEN WRENCH-1PC
R1 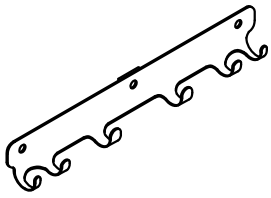 POTHOOK-1PC	S1 CAM-LOCKS CAPS-4PCS	T1 8mm× 3/4" 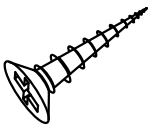 SCREWS-3PCS	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

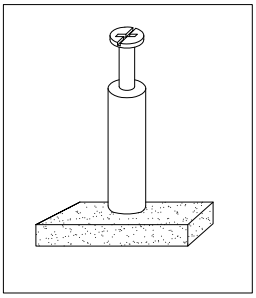

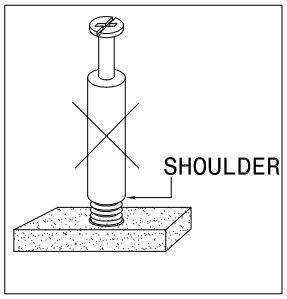

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

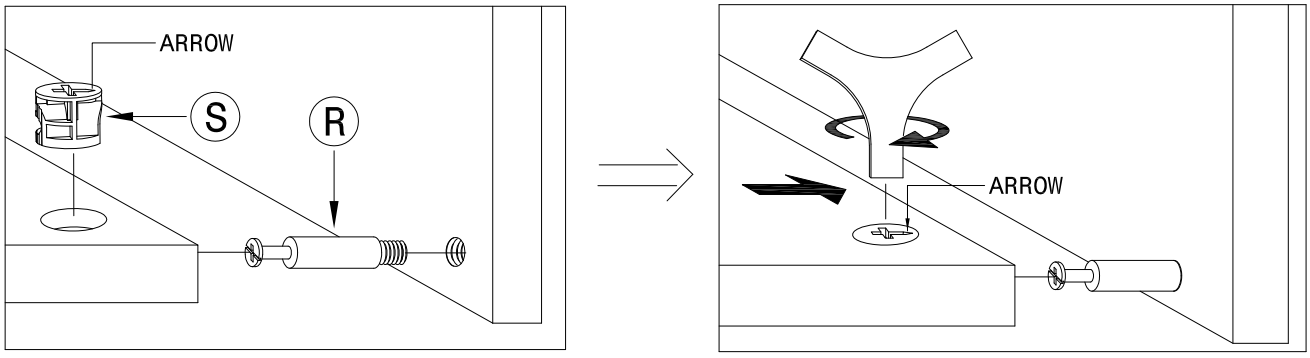

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

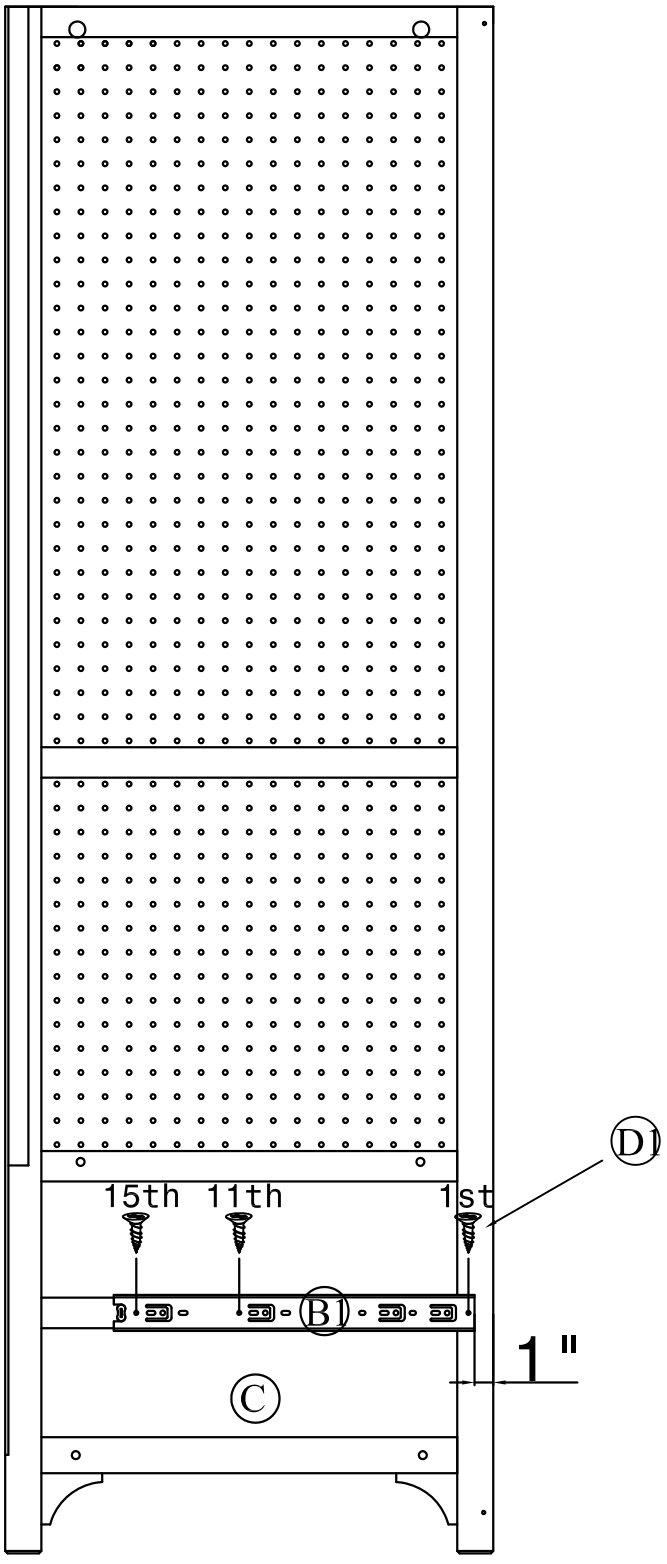

1). ASSEMBLE THE OUTER SLIDER(B1).

- ATTACH THE OUTER SLIDER(B1) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(D1).

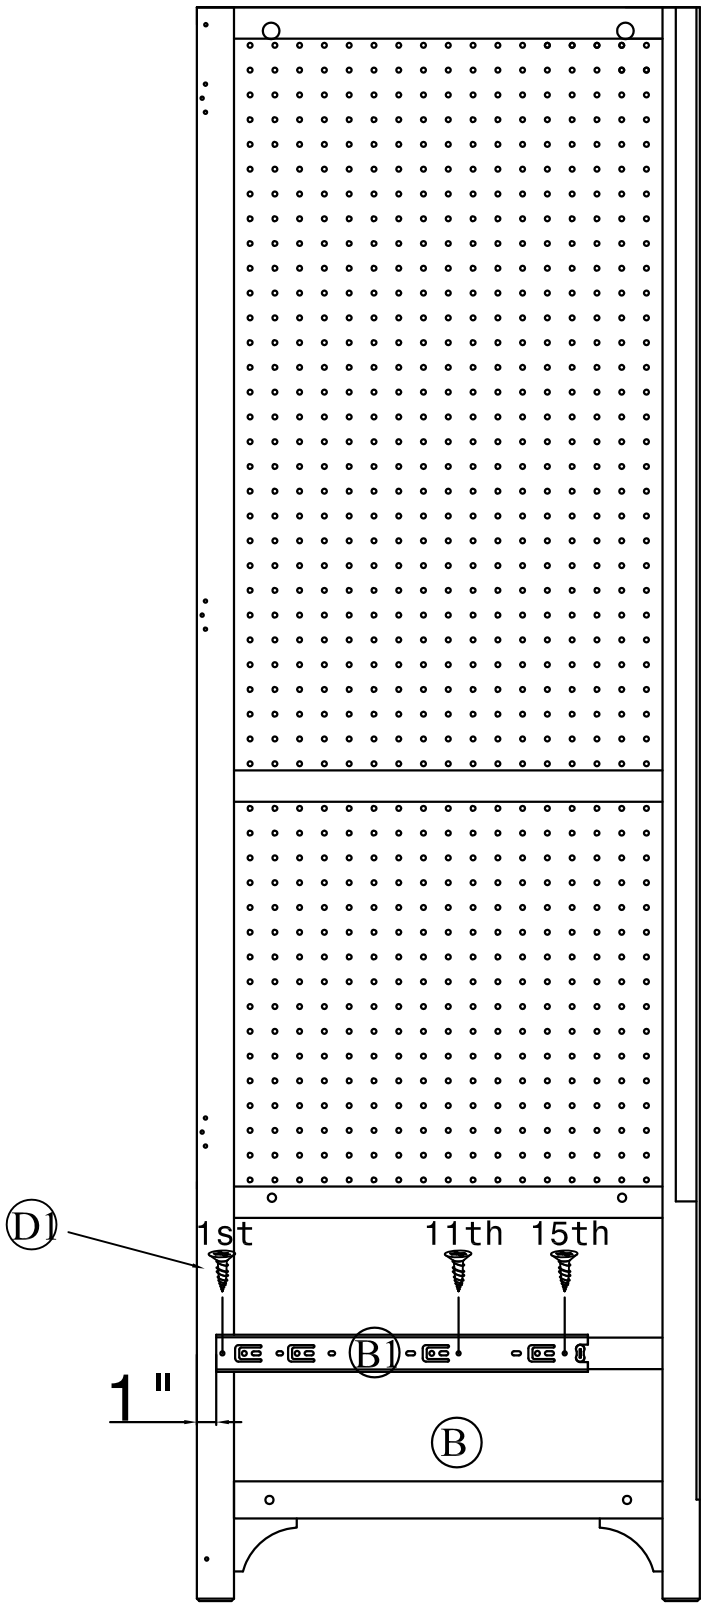

2). ASSEMBLE THE OUTER SLIDER(B1).

- ATTACH THE OUTER SLIDER(B1) TO LEFT SIDE PANEL(B) USING 3 SCREWS(D1).

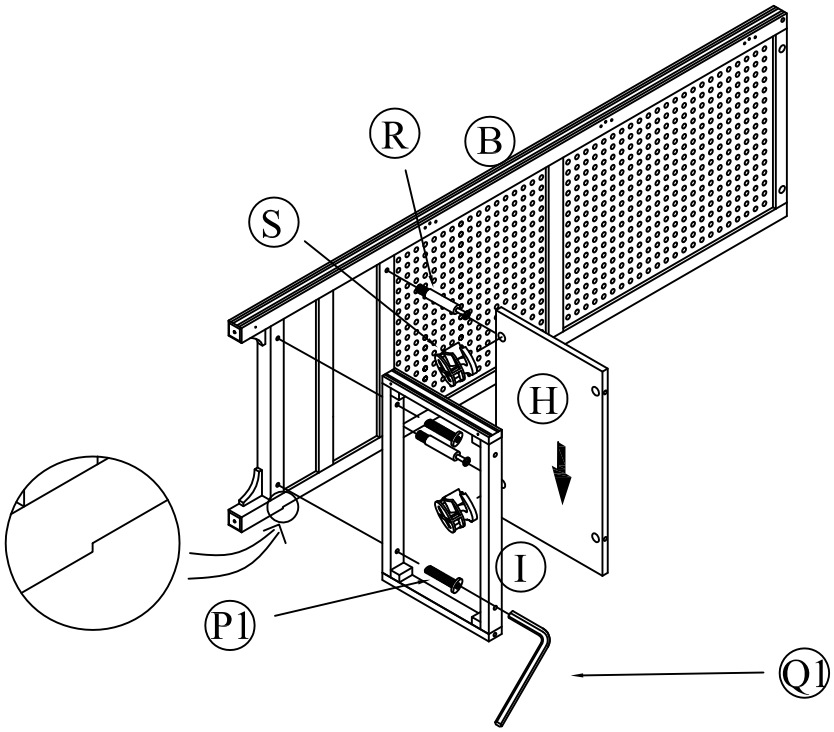

3). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 2 CAM-BOLTS(R) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(H) AND ATTACH USING 2 CAM-LOCKS(S).
- ATTACH THE BOTTOM PANEL(I) TO LEFT SIDE PANEL(B) USING 2 BOLTS(P1).

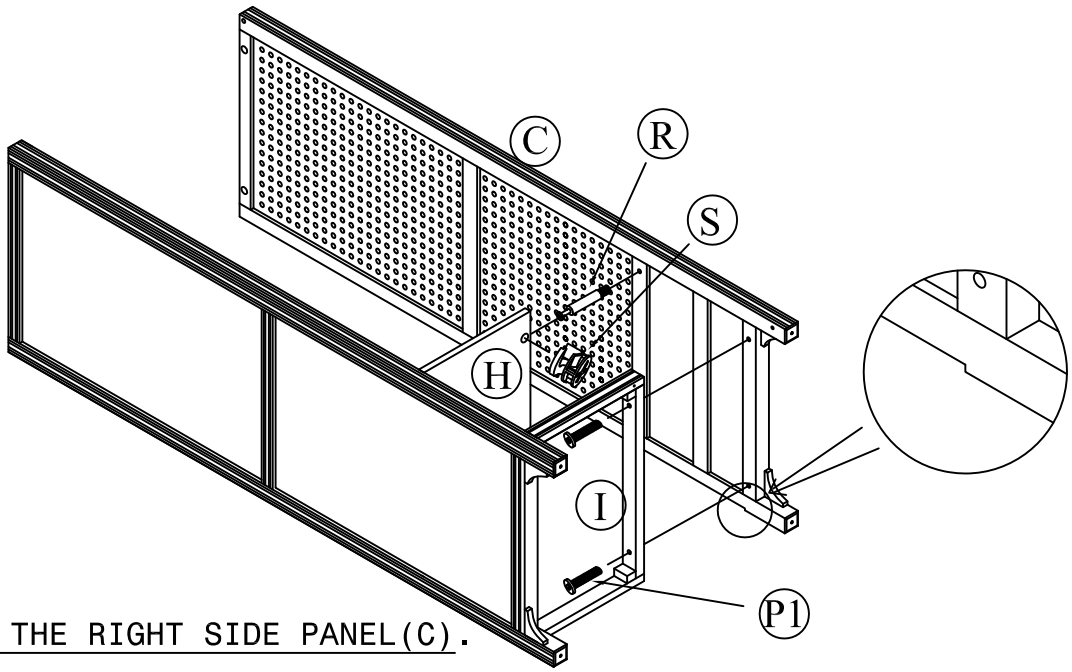

4). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(R) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(H) AND ATTACH USING 2 CAM-LOCKS(S).
- ATTACH THE BOTTOM PANEL(I) TO RIGHT SIDE PANEL(C) USING 2 BOLTS(P1).

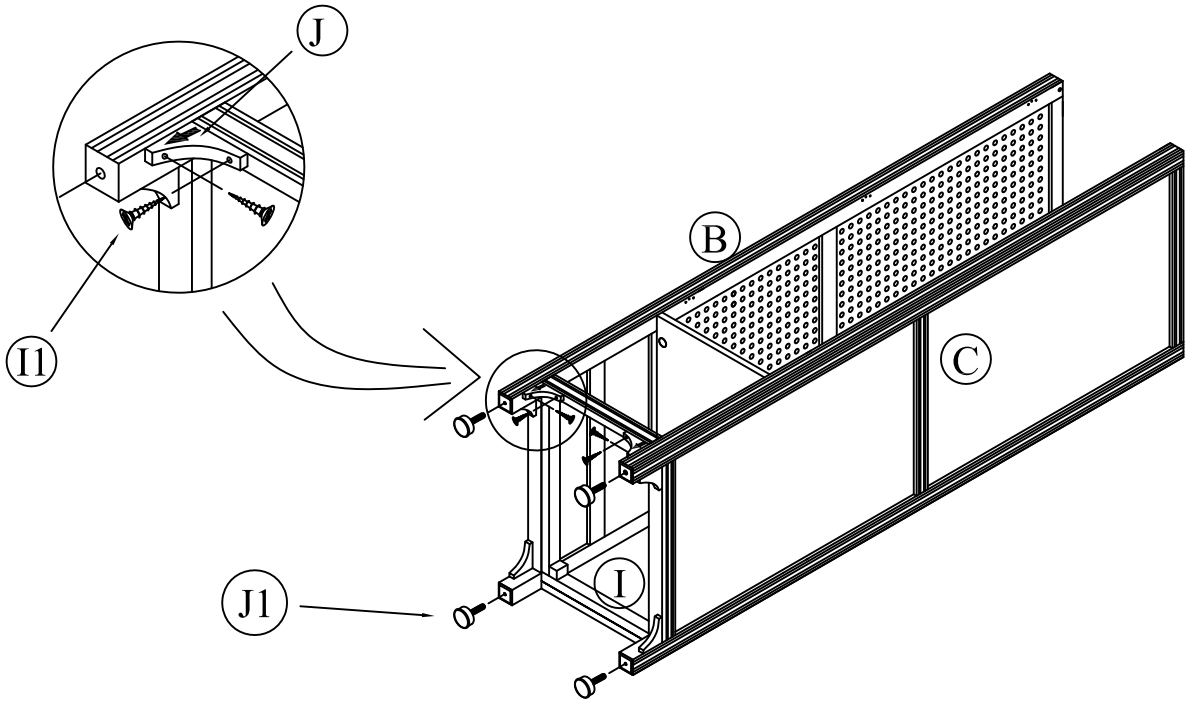

5). ASSEMBLE THE PANELS(J) AND FEET(J1).

- ATTACH PANELS(J) TO PANEL(B/C/I) USING 4 SCREWS(I1).
- ROTATE THE FEET(J1) INTO THE HOLES IN THE PANEL(B/C).

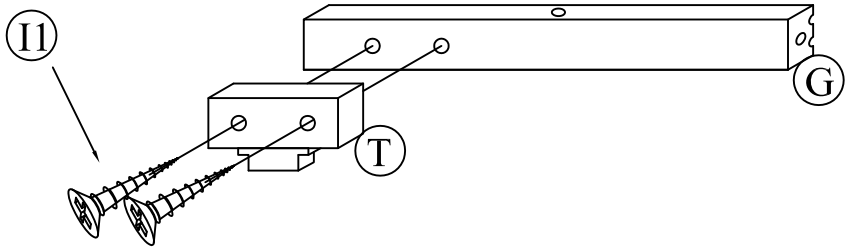

6). ASSEMBLE THE MAGNET(T).

- ATTACH THE MAGNET(T) TO ADORNING PANEL(G) USING 2 SCREWS(I1).

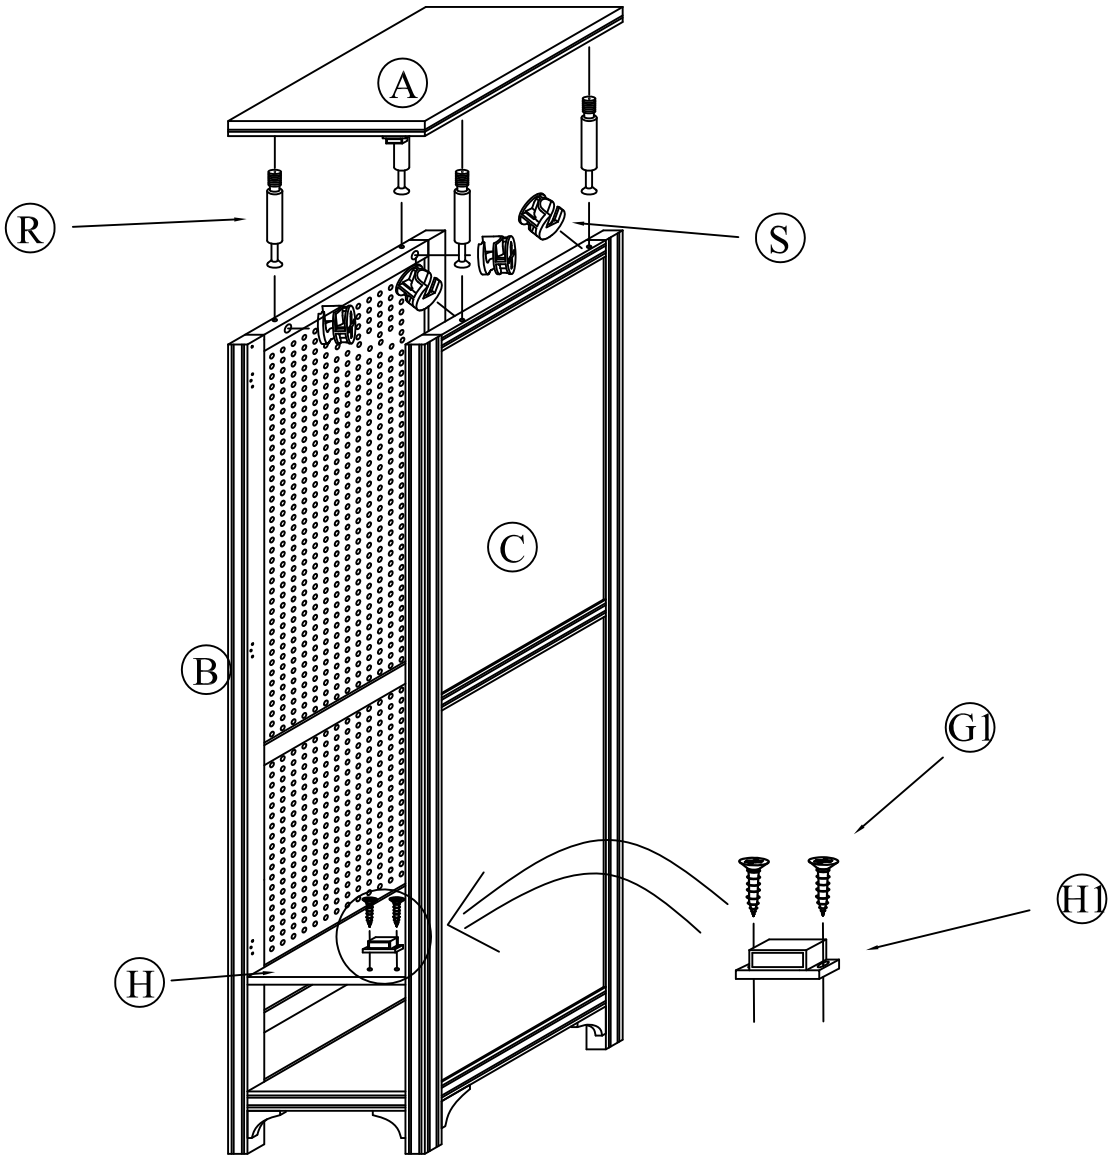

7). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(R) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(R) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(S).
- ATTACH THE SMALL MAGNET(H1) TO ACROSS PANEL(H) USING 2 SCREWS(G1).

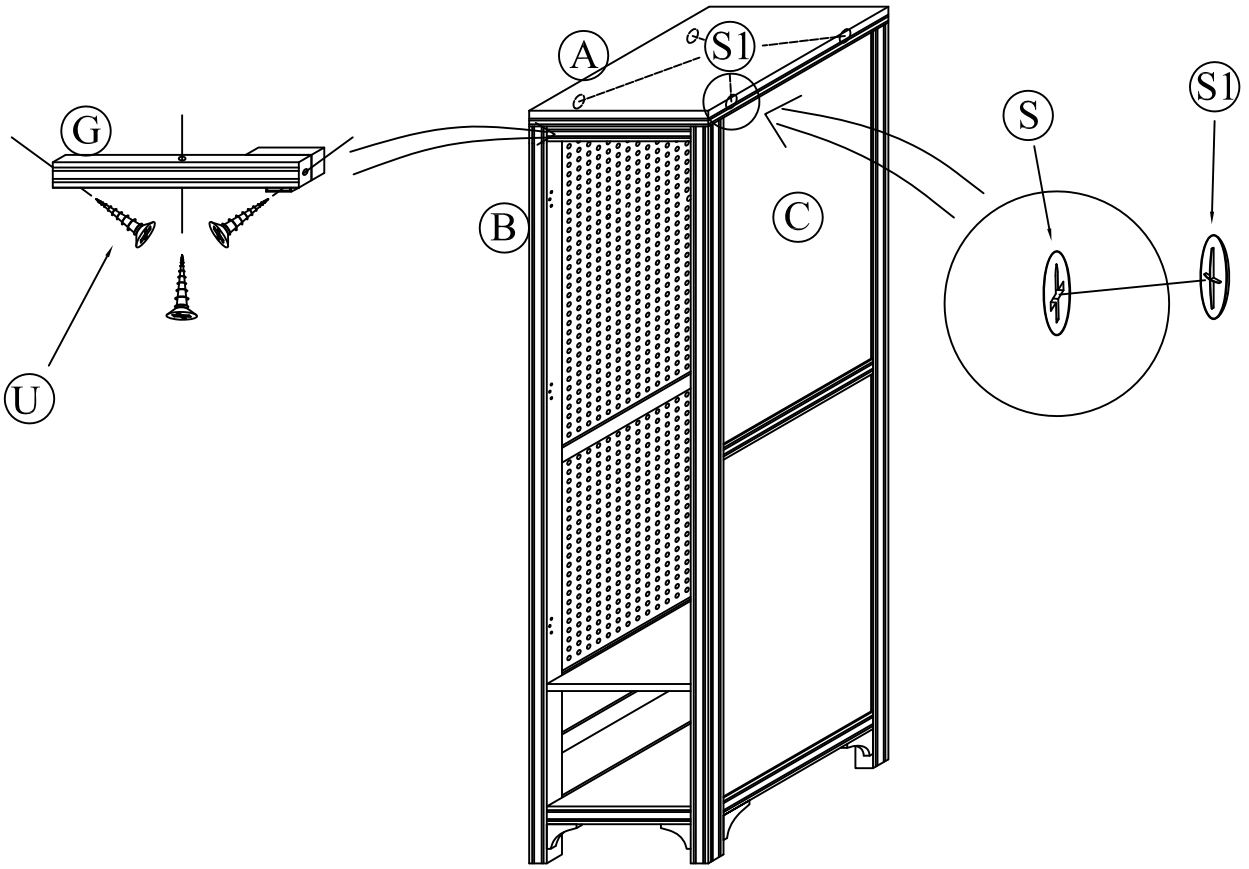

8). ASSEMBLE THE ADORNING PANEL(G).

- ATTACH THE ADORNING PANEL(G) TO PANEL(A/B/C) USING 3 SCREWS(U).
- ATTACH 4 CAM-LOCKS(S) USING 4 CAM-LOCK CAPS(S1).

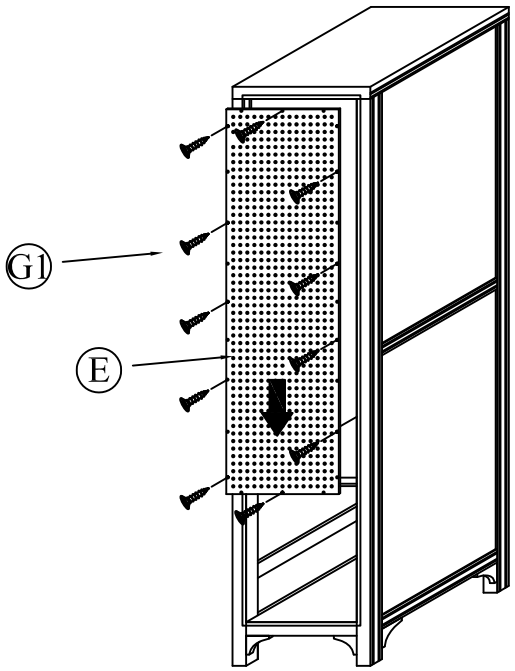

9). ASSEMBLE THE SMALL BACK PANEL(E).

- ATTACH THE SMALL BACK PANEL(E) USING 24 SCREWS(G1).

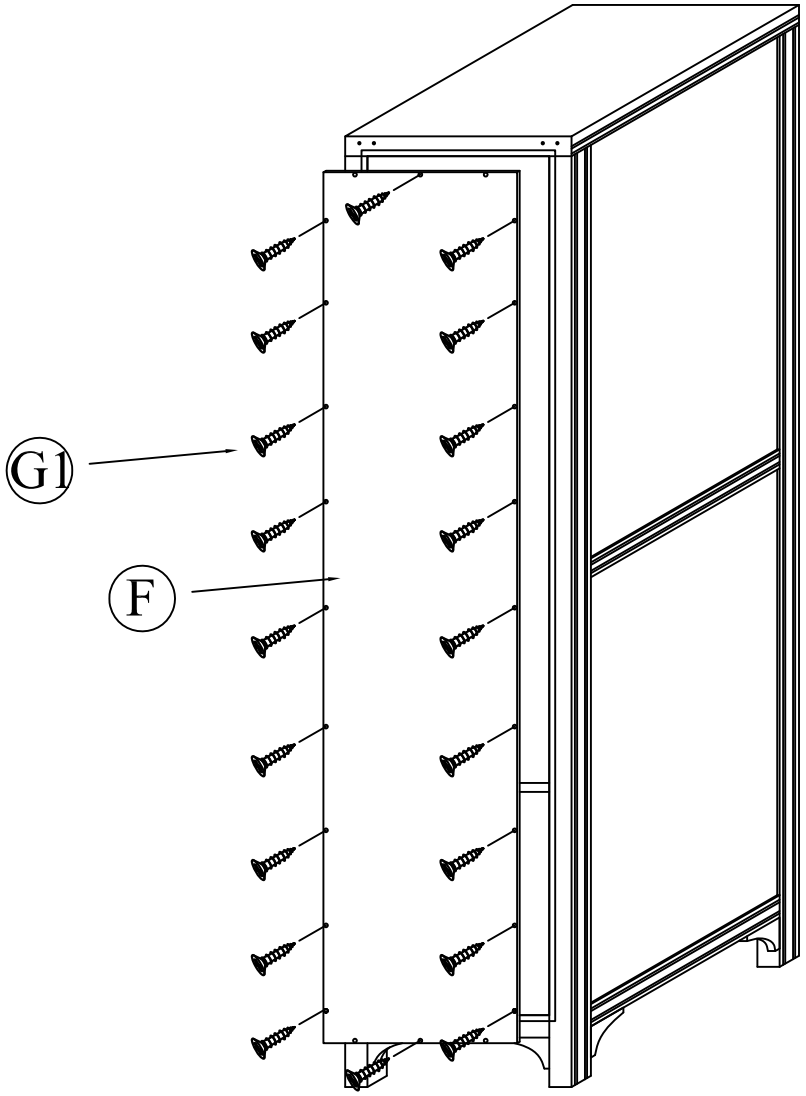

10). ASSEMBLE THE LARGE BACK PANEL(F).

- ATTACH THE LARGE BACK PANEL(F) USING 24 SCREWS(G1).

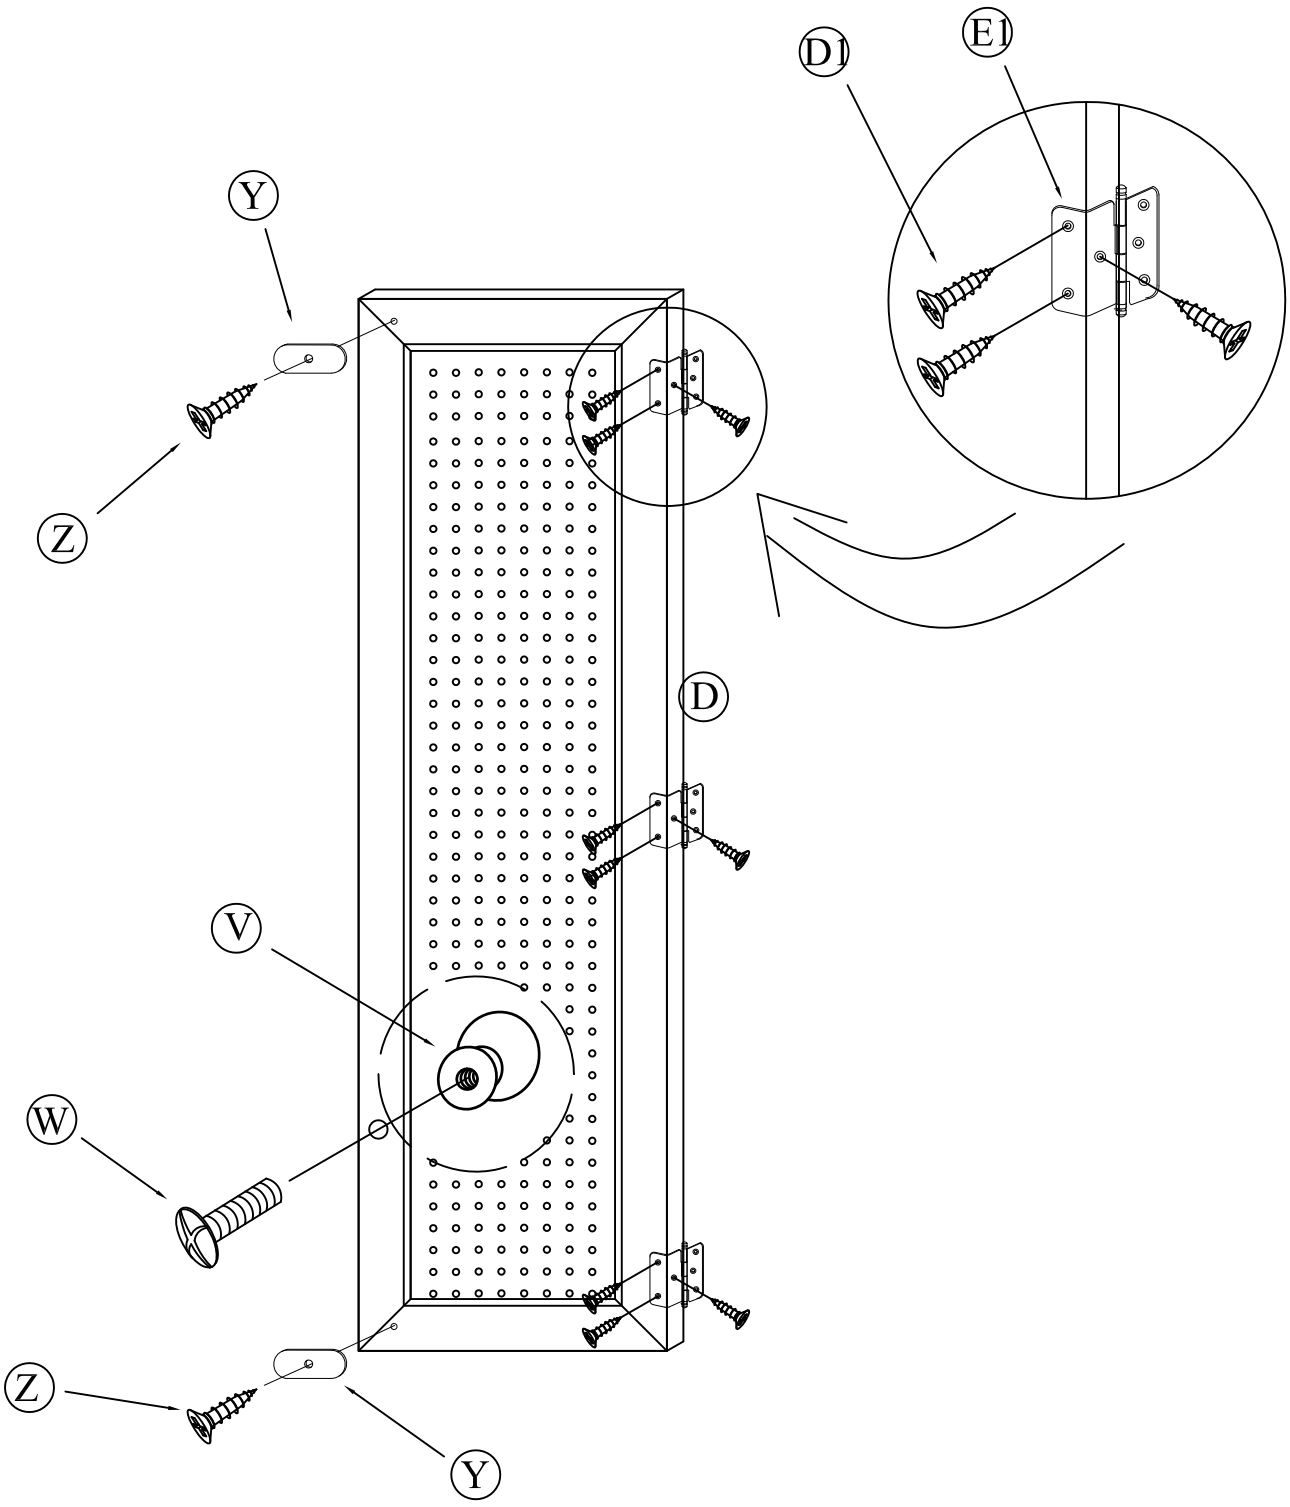

11). ASSEMBLE THE DOOR(D).

- ATTACH 1 KNOB(V) TO DOOR(D) USING 1 SCREW(W).
- ATTACH 2 FEMALE MAGNETS(Y) TO DOOR(D) USING 2 SCREWS(Z).
- ATTACH 3 HINGES(E1) TO DOOR(D) USING 9 SCREWS(D1).

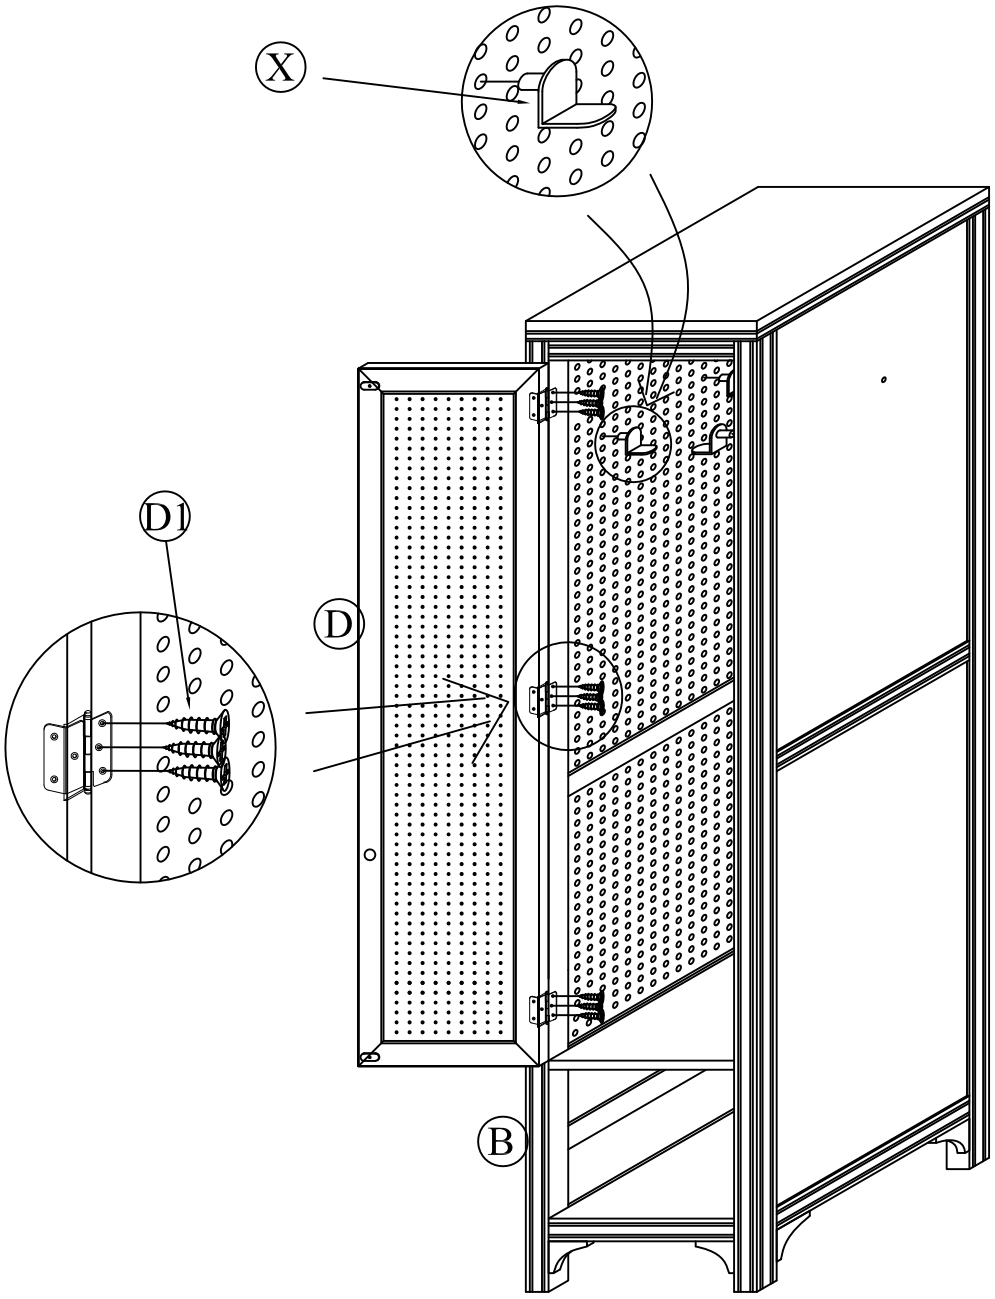

12). ASSEMBLE THE DOOR(D) AND SHELF SUPPORTS(X).

- ATTACH THE DOOR(D) TO LEFT SIDE PANEL(B) USING 9 SCREWS(D1).
- INSERT 4 SHELF SUPPORTS(X) INTO THE HOLES IN THE SIDE PANEL(B/C).

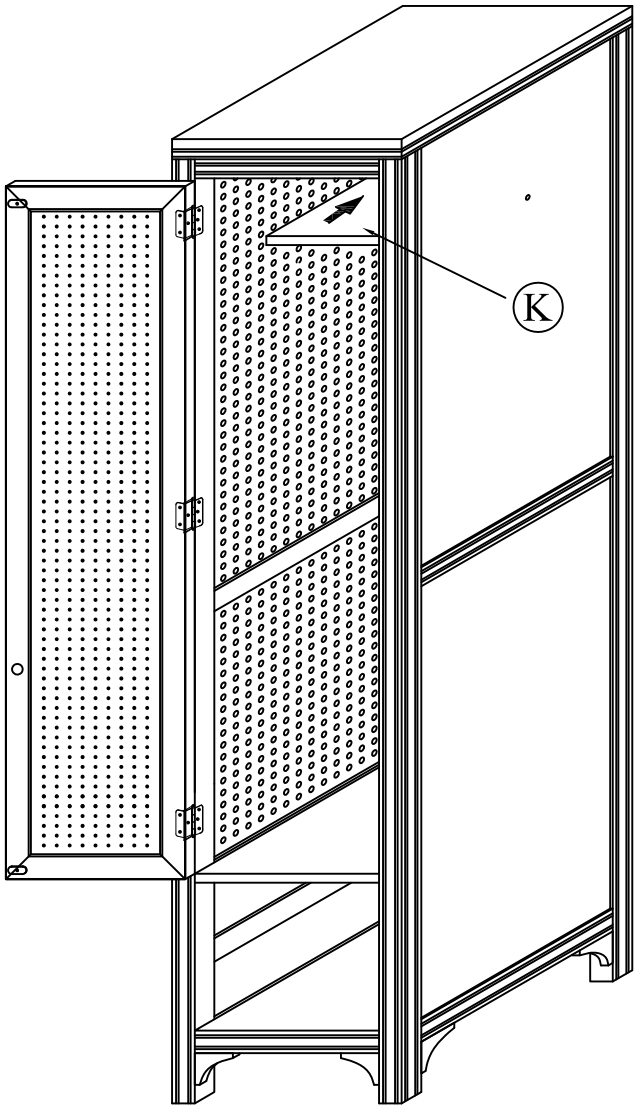

13). ASSEMBLE THE SHELF(K).

- PLACE THE SHELF(K) ONTO THE SHELF SUPPORTS(X).

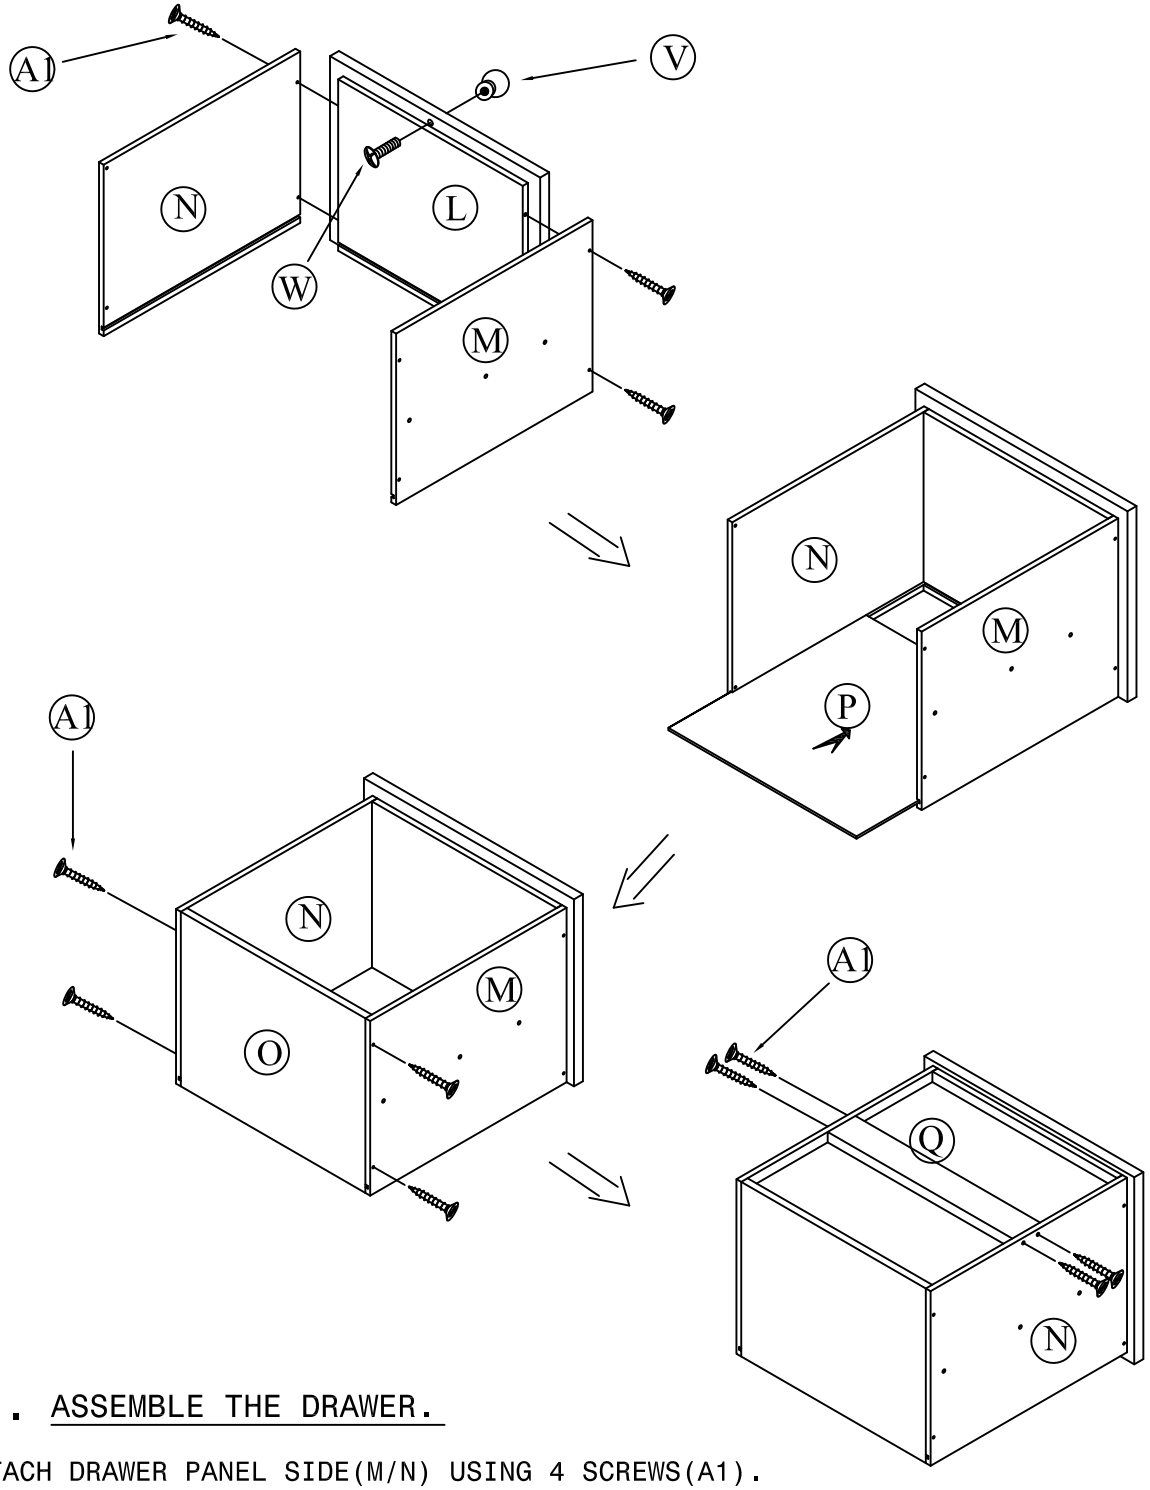

14). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(M/N) USING 4 SCREWS(A1).
- ATTACH THE KNOB(V) TO DRAWER PANEL FRONT(L) USING 1 SCREW(W).
- INSERT DRAWER PANEL BOTTOM(P) INTO THE SLOTS IN THE DRAWER PANEL SIDE(M/N).
- ATTACH DRAWER PANEL BACK(O) BETWEEN LEFE SIDE PANEL(M) AND RIGHT SIDE PANEL(N) USING 4 SCREWS(A1).
- ATTACH DRAWER SUPPORT PANEL(Q) BETWEEN LEFE SIDE PANEL(M) AND RIGHT SIDE PANEL(N) USING 4 SCREWS(A1).

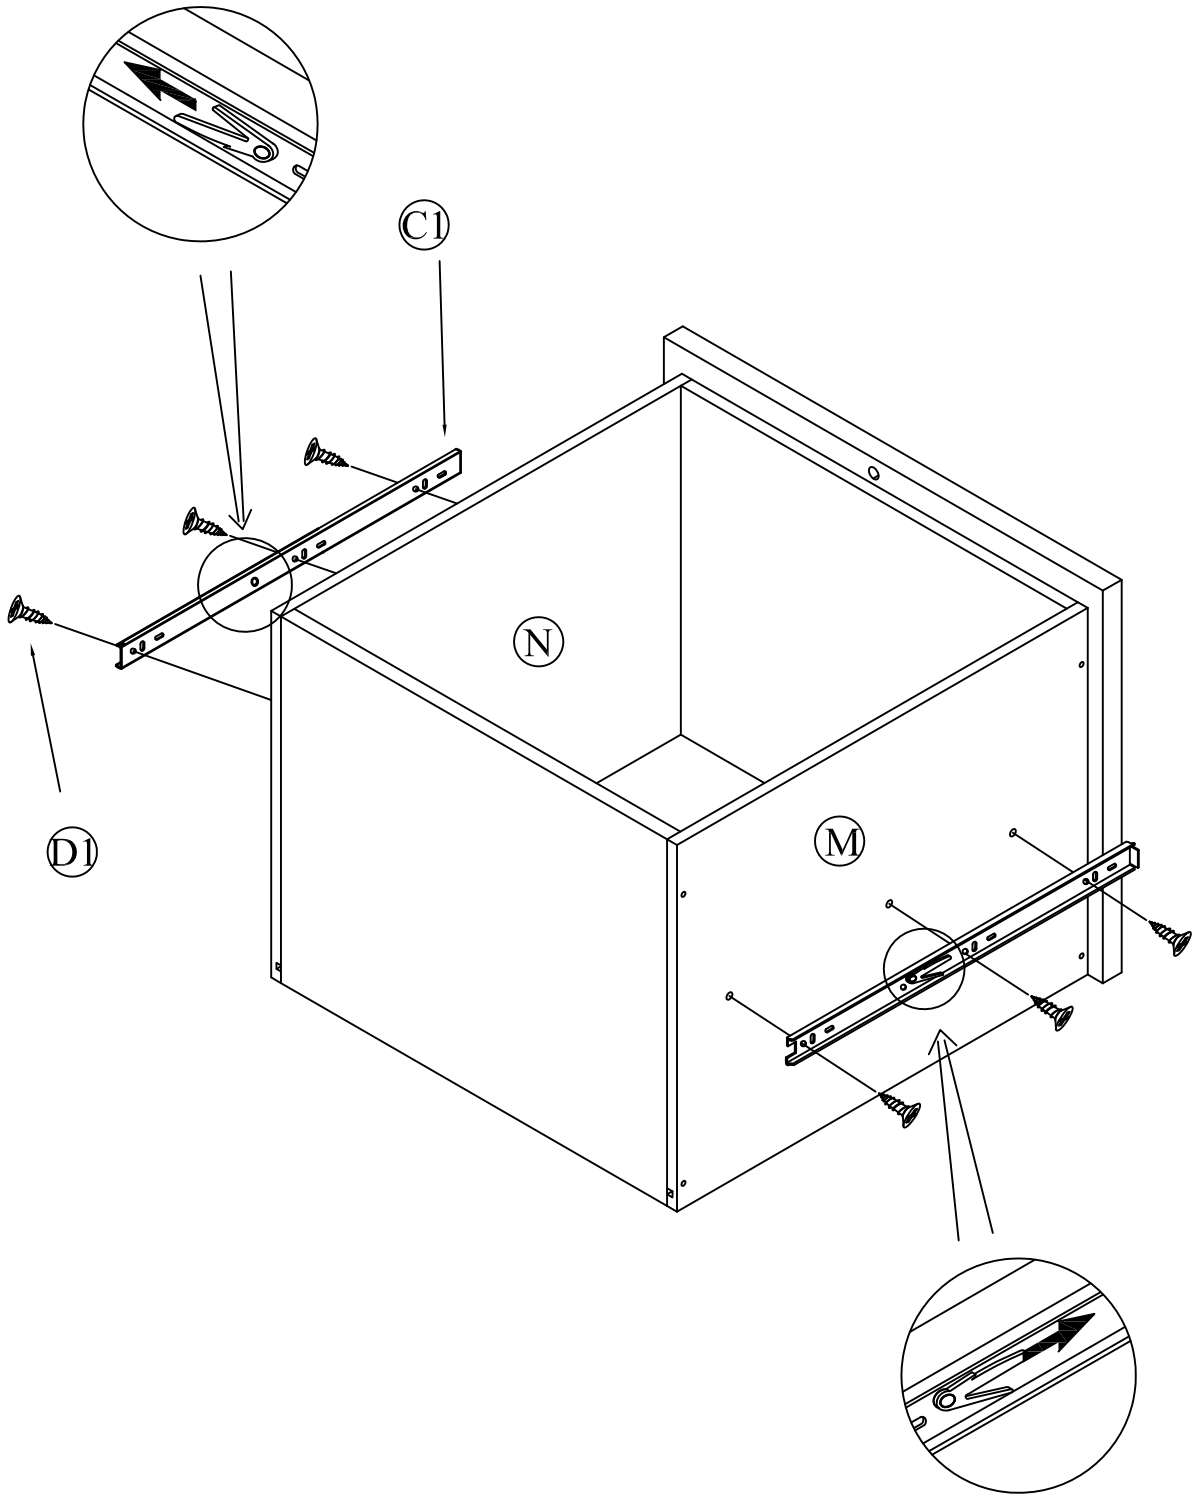

15). ASSEMBLE THE INNER SLIDER(C1).

- ATTTACH 2 INNER SLIDERS(C1) TO PANEL(M/N) USING 6 SCREWS(D1).

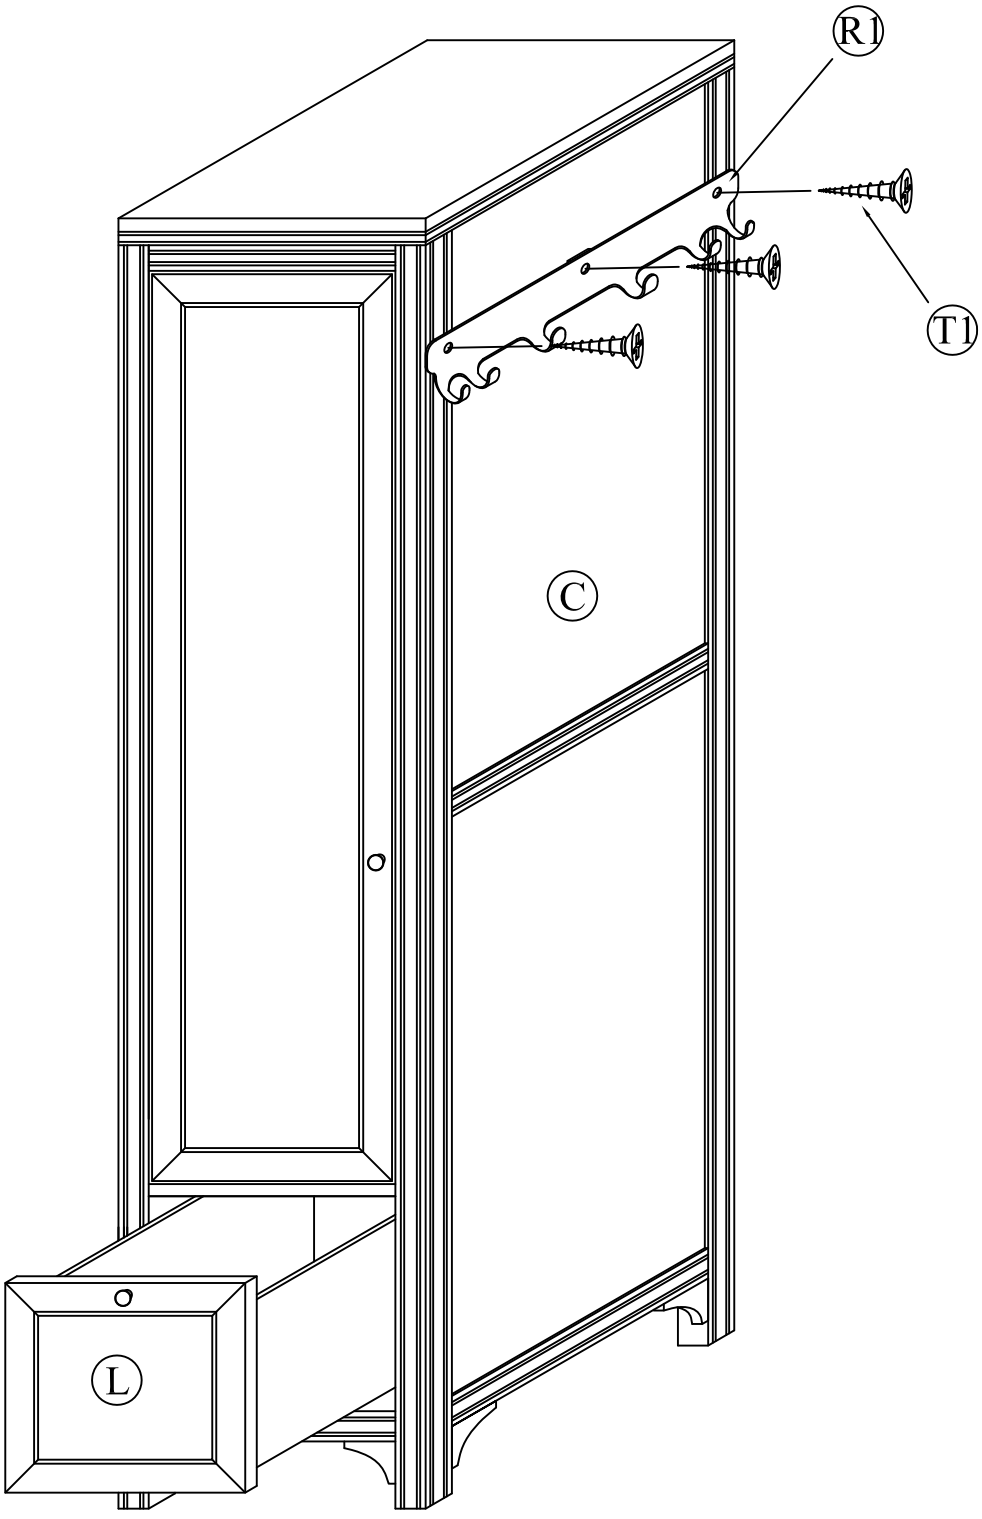

16). ASSEMBLE THE DRAWERS.

- INSERT THE DRAWER INTO THE SLIDER.
- ATTACH THE POTHOOK(R1) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(T1).

Warning

The anti-tip hardware must be used as part of assembly!

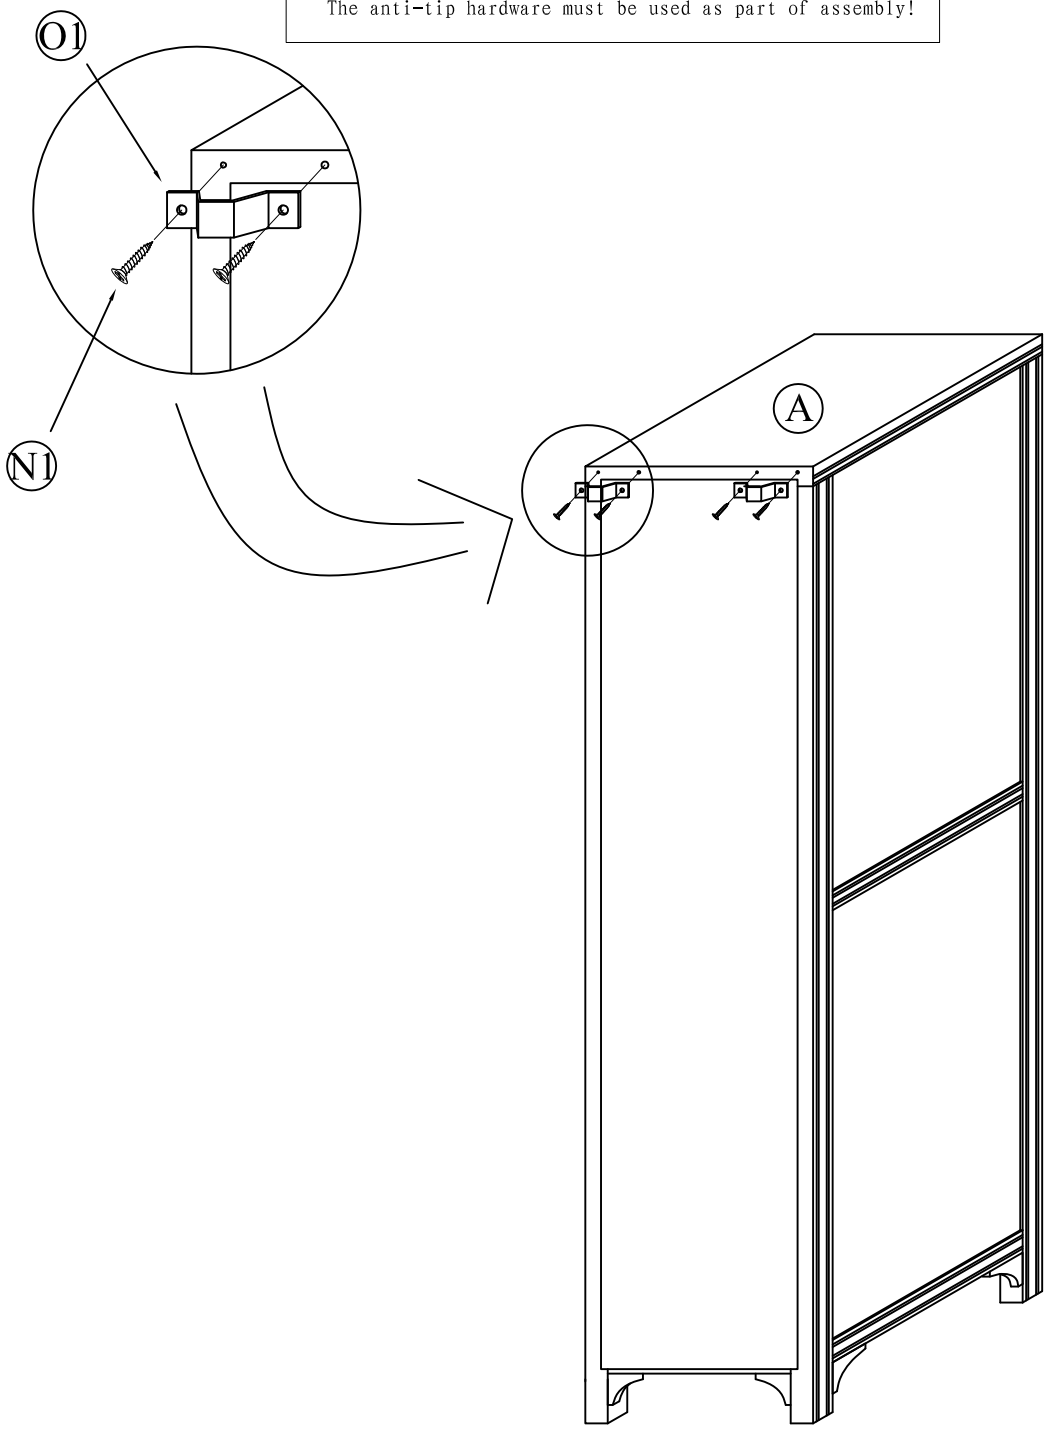

17). ASSEMBLE THE HOOKS(O1).

- ATTACH 2 HOOKS(O1) USING 4 SCREWS(N1) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A).

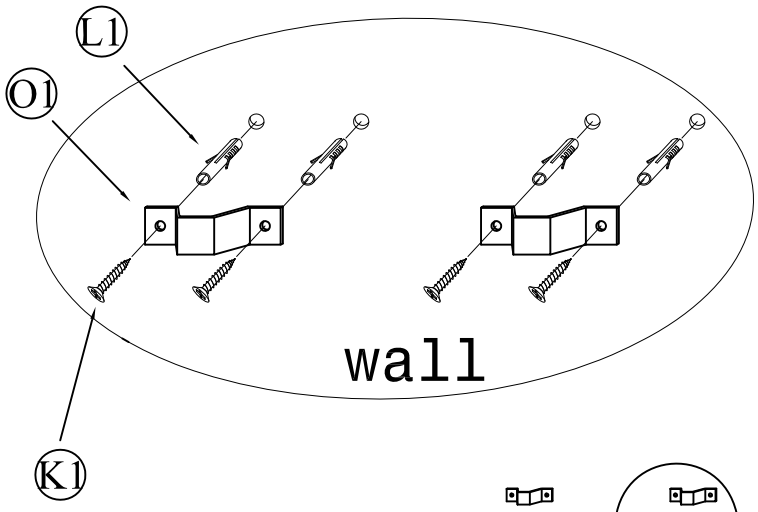

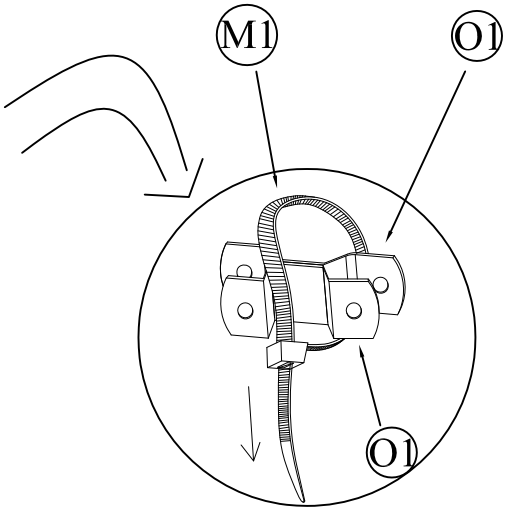

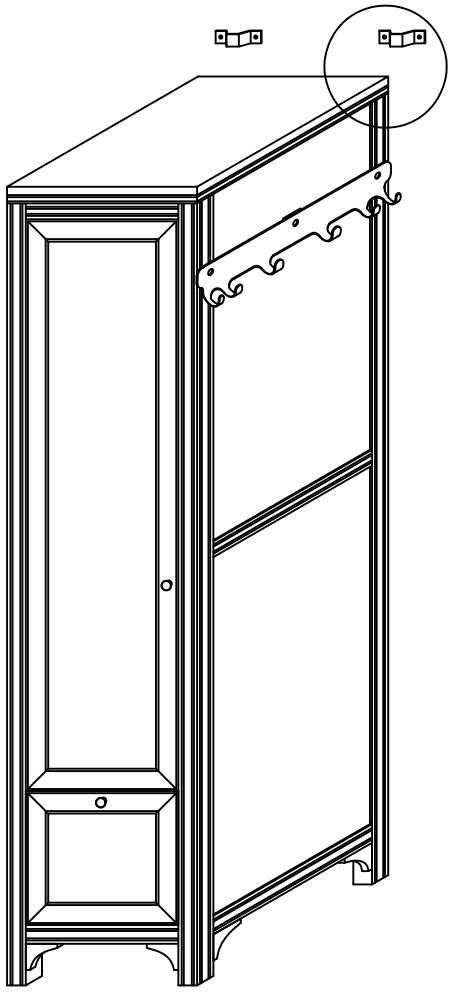

18). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(L1) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS(K1) INTO THE GECKOS(L1).
- CONNECT THE TWO HOOKS(O1) WITH A PLASTIC BELT(M1).